



RP-16WRD WIRED KEYPAD

Simple instruction

RP-16WRD is a type of "mini" wired dual Way keypad controller with novel design, smooth lines, stable Performance. It can control our wireless alarm panel to realize remote controlling the panel and we can configure the alarm panel without use of monitor.

2. Product specification

- 1 Model: RP-16WRD
- 1 Working voltage: 12V wired
- 1 Main user password: 1234 server side
- 1 Default device password: 012345



Entering the system settings[*]+[012345]+[#]


3. Operation

Operation description:

- ① ARM: press user password [1234] and [arm button],
- ② disarm: press user password [1234] and [disarm button],
- ③ Home alarm: press user password [1234] and [stay button],
- ④ Help: press [help], LCD will display the flashing alarm server give emergency notification.
- ⑤ Return/confirm: press [*] to return, [#] to confirm.

4. Connect with alarm panel

Make the wireless panel under the status of setting, choose the panel to be remote controller code, Then choose the code of the remote controller and confirm. Then trigger the arm or disarm key of the keypad.

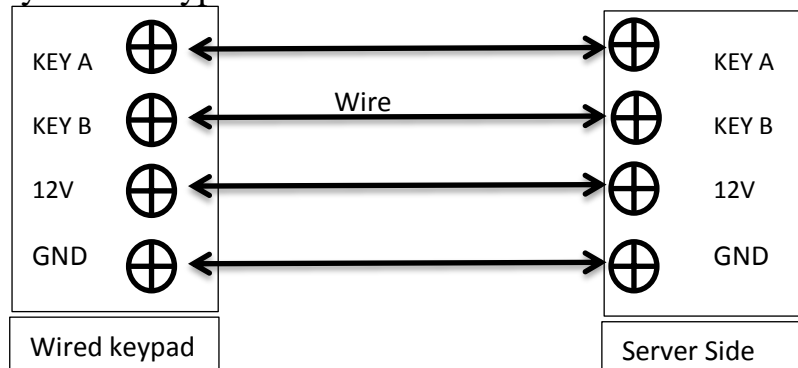

For brief details about wired keypad contact tech support